

uSimMarineV22: Vehicle Simulation

July 2022

Michael Benjamin, mikerb@mit.edu
Department of Mechanical Engineering
MIT, Cambridge MA 02139
project-pavlab/appdocs/app_usimmarine_v22

1	Overview	1
2	Configuration Parameters for uSimMarineV22	3
3	Publications and Subscriptions for uSimMarineV22	5
3.1	Variables Published by uSimMarineV22	5
3.2	Variables Subscribed for by uSimMarineV22	5
3.3	Command Line Usage of uSimMarineV22	6
4	Setting the Initial Vehicle Position, Pose and Trajectory	6
5	Propagating the Vehicle Speed, Heading, Position and Depth	7
5.1	Propagating the Vehicle Speed	7
5.2	Propagating the Vehicle Heading	8
5.3	Propagating the Vehicle Position	9
5.4	Propagating the Vehicle Depth	10
6	Propagating the Vehicle Altitude	12
7	Simulation of External Drift	12
7.1	External X-Y Drift from Initial Simulator Configuration	12
7.2	External X-Y Drift Received from Other MOOS Applications	13
8	The ThrustMap Data Structure	14
8.1	Automatic Pruning of Invalid Configuration Pairs	14
8.2	Automatic Inclusion of Implied Configuration Pairs	15
8.3	A Shortcut for Specifying the Negative Thrust Mapping	15
8.4	The Inverse Mapping - From Speed To Thrust	15
8.5	Default Behavior of an Empty or Unspecified ThrustMap	16
9	Wormholes	17
9.1	Wormhole Motivation	17
9.2	Wormhole Configuration	18

1 Overview

The `uSimMarineV22` application is a 3D vehicle simulator that updates vehicle state, position and trajectory, based on the present actuator values and prior vehicle state. This app is the successor to the `uSimMarine` app. Released in 2022, `uSimMarineV22` is a backward compatible superset of `uSimMarine`, with the following notable changes or additions:

- **Embedded PID controller:** The user has the option to embed a PID controller within the simulator for near-zero latency between PID output and simulator position updates. This allows for substantial increases in maximum time warp. Where previous missions had a maximum time warp of say 50x realtime, 200x to 300x realtime has been observed.
- **Worm holes:** A worm hole a region in the operation area that will consume an vehicle, and instantly shift its position to another region in the operating area. This facilitates missions where traffic patterns of several contacts are used for testing collision avoidance.
- **Sailing:** The simulator will apply basic sailing effects on the vehicle given (a) a polar plot describing vehicle speed relative to a given wind direction and magnitude, (b) incoming updates to the current wind direction and magnitude.

The typical usage scenario has a single instance of `uSimMarineV22` associated with each simulated vehicle, as shown in Figure 1.

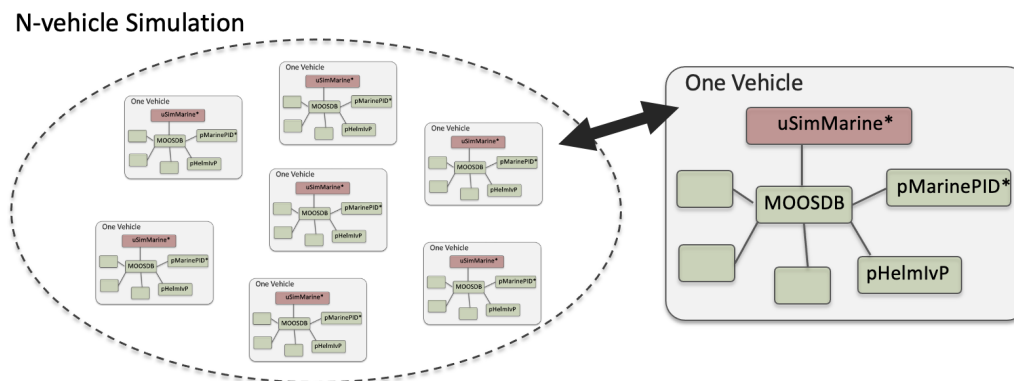


Figure 1: **Typical `uSimMarineV22` Usage:** In an N-vehicle simulation, an instance of `uSimMarineV22` is used for each vehicle. Each simulated vehicle typically has its own dedicated MOOS community. The IvP Helm (`pHelmIvP`) publishes high-level control decisions. The PID controller (`pMarinePID`) converts the high-level control decisions to low-level actuator decisions. Finally the simulator (`uSimMarineV22`) reads the low-level actuator postings to produce a new vehicle position.

This style of simulation can be contrasted with simulators that simulate a comprehensive set of aspects of the simulation, including multiple vehicles, and aspects of the environment and communications. The `uSimMarineV22` simulator simply focuses on a single vehicle. It subscribes for the vehicle navigation state variables:

- `NAV_X`, `NAV_Y`, `NAV_SPEED`, `NAV_HEADING`, and `NAV_DEPTH`

as well as the actuator values

- `DESIRED_RUDDER`, `DESIRED_THRUST`, and `DESIRED_ELEVATOR`.

The simulator accommodates a notion of external drifts applied to the vehicle to crudely simulate current or wind. These drifts may be set statically or may be changing dynamically by other

MOOS processes. The simulator also may be configured with a simple geo-referenced data structure representing a field of water currents.

Under typical UUV payload autonomy operation, the simulator and `pMarinePID` MOOS modules would not be present. The vehicle's native controller would handle the role of `pMarinePID`, and the vehicle's native navigation system (and the vehicle itself) would handle the role of the simulator.

2 Configuration Parameters for `uSimMarineV22`

The following parameters are defined for `uSimMarineV22`. A more detailed description is provided in other parts of this section. Parameters having default values are indicated so in parentheses below.

Listing 2.1: Configuration Parameters for `uSimMarineV22`.

<code>buoyancy_rate</code> :	Rate, in meters per second, at which vehicle floats to surface at zero speed. The default is zero. Section 5.4.
<code>current_field</code> :	A file containing the specification of a current field.
<code>current_field_active</code> :	If true, simulator uses the current field if specified.
<code>default_water_depth</code> :	Default value for local water depth for calculating altitude (0).
<code>drift_vector</code> :	A pair of external drift values, direction and magnitude.
<code>rotate_speed</code> :	An external rotational speed in degrees per second (0).
<code>drift_x</code> :	An external drift value applied in the x direction (0).
<code>drift_y</code> :	An external drift value applied in the y direction (0).
<code>max_acceleration</code> :	Maximum rate of vehicle acceleration in m/s^2 (0.5).
<code>max_deceleration</code> :	Maximum rate of vehicle deceleration in m/s^2 (0.5).
<code>max_depth_rate</code> :	Maximum rate of vehicle depth change, meters per second. The default is 0.5. Section 5.4.
<code>max_depth_rate_speed</code> :	Vehicle speed at which max depth rate is achievable (2.5). Section 5.4.
<code>prefix</code> :	Prefix of MOOS variables published. The default is <code>USM_</code> .
<code>sim_pause</code> :	If true, the simulation is paused. The default is false.
<code>start_depth</code> :	Initial vehicle depth in meters. The default is zero. Section 4.
<code>start_heading</code> :	Initial vehicle heading in degrees. The default is zero. Section 4.
<code>start_pos</code> :	A full starting position and trajectory specification. Section 4.
<code>start_speed</code> :	Initial vehicle speed in meters per second. The default is zero. Section 4.
<code>start_x</code> :	Initial vehicle x position in local coordinates. The default is zero. Section 4.
<code>start_y</code> :	Initial vehicle y position in local coordinates. The default is zero. Section 4.
<code>thrust_factor</code> :	A scalar correlation between thrust and speed. The default is 20.
<code>thrust_map</code> :	A mapping between thrust and speed values. Section 8.
<code>thrust_reflect</code> :	If true, negative thrust is simply opposite positive thrust. The default is false. Section 8.

- `turn_loss`: A range [0,1] affecting speed lost during a turn. The default is 0.85.
- `turn_rate`: A range [0,100] affecting vehicle turn radius, e.g., 0 is an infinite turn radius. The default is 70.

An Example MOOS Configuration Block

An example MOOS configuration block is provided in Listing 2 below. This can also be obtained from a terminal window with:

```
$ uSimMarineV22 --example or -e
```

Listing 2.2: Example configuration of the uSimMarineV22 application.

```

1 =====
2 uSimMarineV22 Example MOOS Configuration
3 =====
4
5 ProcessConfig = uSimMarineV22
6 {
7   AppTick      = 4
8   CommsTick    = 4
9
10  start_x       = 0
11  start_y       = 0
12  start_heading = 0
13  start_speed   = 0
14  start_depth   = 0
15  start_pos     = x=0, y=0, speed=0, heading=0, depth=0
16
17  drift_x       = 0
18  drift_y       = 0
19  rotate_speed  = 0
20  drift_vector  = 0,0      // heading, magnitude
21
22  buoyancy_rate = 0.025 // meters/sec
23  max_acceleration = 0 // meters/sec^2
24  max_deceleration = 0.5 // meters/sec^2
25  max_depth_rate = 0.5 // meters/sec
26  max_depth_rate_speed = 2.0 // meters/sec
27
28  sim_pause     = false // or {true}
29  dual_state    = false // or {true}
30  thrust_reflect = false // or {true}
31  thrust_factor = 20 // range [0,inf)
32  turn_rate     = 70 // range [0,100]
33  thrust_map    = 0:0, 20:1, 40:2, 60:3, 80:5, 100:5
34 }
```

3 Publications and Subscriptions for uSimMarineV22

The interface for `uSimMarineV22`, in terms of publications and subscriptions, is described below. This same information may also be obtained from the terminal with:

```
$ usimMarine --interface or -i
```

3.1 Variables Published by uSimMarineV22

The primary output of `uSimMarineV22` to the MOOSDB is the full specification of the updated vehicle position and trajectory, along with a few other pieces of information:

- `APPCAST`: Contains an appcast report identical to the terminal output. Appcasts are posted only after an appcast request is received from an appcast viewing utility.
- `BUOYANCY_REPORT`:
- `TRIM_REPORT`:
- `USM_ALTITUDE`: The updated vehicle altitude in meters if water depth known.
- `USM_DEPTH`: The updated vehicle depth in meters. Section 5.4.
- `USM_DRIFT_SUMMARY`: A summary of the current total external drift.
- `USM_HEADING`: The updated vehicle heading in degrees.
- `USM_HEADING_OVER_GROUND`: The updated vehicle heading over ground.
- `USM_LAT`: The updated vehicle latitude position.
- `USM_LONG`: The updated vehicle longitude position.
- `USM_RESET_COUNT`: The number of time the simulator has been reset.
- `USM_SPEED`: The updated vehicle speed in meters per second.
- `USM_SPEED_OVER_GROUND`: The updated speed over ground.
- `USM_X`: The updated vehicle x position in local coordinates.
- `USM_Y`: The updated vehicle y position in local coordinates.
- `USM_YAW`: The updated vehicle yaw in radians.

An example `USM_DRIFT_SUMMARY` string: "ang=90, mag=1.5, xmag=90, ymag=0".

3.2 Variables Subscribed for by uSimMarineV22

The `uSimMarineV22` application will subscribe for the following MOOS variables:

- `APPCAST_REQ`: A request to generate and post a new appcast report, with reporting criteria, and expiration. See the documentation on Appcasting.
- `DESIRED_THRUST`: The thruster actuator setting, $[-100, 100]$.
- `DESIRED_RUDDER`: The rudder actuator setting, $[-100, 100]$.
- `DESIRED_ELEVATOR`: The depth elevator setting, $[-100, 100]$.
- `USM_SIM_PAUSED`: Simulation pause request, either `true` or `false`.
- `USM_CURRENT_FIELD`: If `true`, a configured current field is active.
- `USM_BUOYANCY_RATE`: Dynamically set the zero-speed float rate.

- `ROTATE_SPEED`: Dynamically set the external rotational speed.
- `DRIFT_X`: Dynamically set the external drift in the x direction.
- `DRIFT_Y`: Dynamically set the external drift in the y direction.
- `DRIFT_VECTOR`: Dynamically set the external drift direction and magnitude.
- `DRIFT_VECTOR_ADD`: Dynamically modify the external drift vector.
- `DRIFT_VECTOR_MULT`: Dynamically modify the external drift vector magnitude.
- `USM_RESET`: Reset the simulator with a new position, heading, speed and depth.
- `WATER_DEPTH`: Water depth at the present vehicle position.

Each iteration, after noting the changes in the navigation and actuator values, it posts a new set of navigation state variables in the form of `USM_X`, `USM_Y`, `USM_SPEED`, `USM_HEADING`, `USM_DEPTH`.

3.3 Command Line Usage of uSimMarineV22

The `uSimMarineV22` application is typically launched as a part of a batch of processes by pAntler, but may also be launched from the command line by the user. The basic command line usage for the `uSimMarineV22` application is the following:

Listing 3.3: Command line usage for the `uSimMarineV22` application.

```

1  Usage: uSimMarineV22 file.moos [OPTIONS]
2
3  Options:
4  --alias=<ProcessName>
5      Launch uSimMarineV22 with the given process name
6      rather than uSimMarineV22.
7  --example, -e
8      Display example MOOS configuration block.
9  --help, -h
10     Display this help message.
11 --version, -v
12     Display the release version of uSimMarineV22.
```

4 Setting the Initial Vehicle Position, Pose and Trajectory

The simulator is typically configured with a vehicle starting position, pose and trajectory given by the following five configuration parameters:

- `start_x`
- `start_y`
- `start_heading`
- `start_speed`
- `start_depth`

The position is specified in local coordinates in relation to a local datum, or (0,0) position. This datum is specified in the `.moos` file at the global level. The heading is specified in degrees and corresponds to the direction the vehicle is pointing. The initial speed and depth by default are zero, and are often left unspecified in configuration. Alternatively, the same five parameters may be set with the `start_pos` parameter as follows:

```
start_pos = x=100, y=150, speed=0, heading=45, depth=0
```

The simulator can also be reset at any point during its operation, by posting to the MOOS variable `USM_RESET`. A posting of the following form will reset the same five parameters as above:

```
USM_RESET = x=200, y=250, speed=0.4, heading=135, depth=10
```

This has been useful in cases where the objective is to observe the behavior of a vehicle from several different starting positions, and an external MOOS script, e.g., `uTimerScript`, is used to reset the simulator from each of the desired starting states.

5 Propagating the Vehicle Speed, Heading, Position and Depth

The vehicle position is updated on each iteration of the `uSimMarineV22` application, based on (a) the previous vehicle state, (b) the elapsed time since the last update, ΔT , (c) the current actuator values, `DESIRED_RUDDER`, `DESIRED_THRUST`, and `DESIRED_ELEVATOR`, and (d) several parameter settings describing the vehicle model.

For simplicity, this simulator updates the vehicle speed, heading, position and depth in sequence, in this order. For example, the position is updated after the heading is updated, and the new position update is made as if the new heading were the vehicle heading for the entire ΔT . The error introduced by this simplification is mitigated by running `uSimMarineV22` with a fairly high MOOS AppTick value keeping the value of ΔT sufficiently small.

5.1 Propagating the Vehicle Speed

The vehicle speed is propagated primarily based on the current value of thrust, which is presumably refreshed upon each iteration by reading the incoming mail on the MOOS variable `DESIRED_THRUST`. To simulate a small speed penalty when the vehicle is conducting a turn through the water, the new thrust value may also be affected by the current rudder value, referenced by the incoming MOOS variable `DESIRED_RUDDER`. The newly calculated speed is also dependent on the previously noted speed noted by the incoming MOOS variable `NAV_SPEED`, and the settings to the two configuration parameters `MAX_ACCELERATION` and `MAX_DECELERATION`.

The algorithm for updating the vehicle speed proceeds as:

1. Calculate $v_{i(\text{RAW})}$, the new raw speed based on the thrust.
2. Calculate $v_{i(\text{TURN})}$, an adjusted and potentially lower speed, based on the raw speed, $v_{i(\text{RAW})}$, and the current rudder angle, `DESIRED_RUDDER`.
3. Calculate $v_{i(\text{FINAL})}$, an adjusted and potentially lower speed based on $v_{i(\text{TURN})}$, compared to the prior speed. If the magnitude of change violates either the max acceleration or max deceleration settings, then the new speed is clipped appropriately.
4. Set the new speed to be $v_{i(\text{FINAL})}$, and use this new speed in the later updates on heading, position and depth.

Step 1: In the first step, the new speed is calculated by the current value of thrust. In this case the *thrust map* is consulted, which is a mapping from possible thrust values to speed values. The thrust

map is configured with the `THRUST_MAP` configuration parameter, and is described in detail in Section 8.

$$v_{i(\text{RAW})} = \text{THRUST_MAP}(\text{DESIRED_THRUST})$$

Step 2: In the second step, the calculated speed is potentially reduced depending on the degree to which the vehicle is turning, as indicated by the current value of the MOOS variable `DESIRED_RUDDER`. If it is not turning, it is not diminished at all. The adjusted speed value is set according to:

$$v_{i(\text{TURN})} = v_{i(\text{RAW})} * (1 - (\frac{|\text{RUDDER}|}{100} * \text{TURN_LOSS}))$$

The configuration parameter `turn_loss` is a value in the range of $[0, 1]$. When set to zero, there is no speed lost in any turn. When set to 1, there is a 100% speed loss when there is a maximum rudder. The default value is 0.85.

Step 3: In the last step, the candidate new speed, $v_{i(\text{TURN})}$, is compared with the incoming vehicle speed, v_{i-1} . The elapsed time since the previous simulator iteration, ΔT , is used to calculate the acceleration or deceleration implied by the new speed. If the change in speed violates either the `min_acceleration`, or `max_acceleration` parameters, the speed is adjusted as follows:

$$v_{i(\text{FINAL})} = \begin{cases} v_{i-1} + (\text{MAX_ACCELERATION} * \Delta T) & \frac{(v_{i(\text{TURN})} - v_{i-1})}{\Delta T} > \text{MAX_ACCELERATION}, \\ v_{i-1} - (\text{MAX_DECELERATION} * \Delta T) & \frac{(v_{i-1} - v_{i(\text{TURN})})}{\Delta T} > \text{MAX_DECELERATION}, \\ v_{i(\text{TURN})} & \text{otherwise.} \end{cases}$$

Step 4: The final speed from the previous step is posted by the simulator as `USM_SPEED`, and is used the calculations of position and depth, described next.

5.2 Propagating the Vehicle Heading

The vehicle heading is propagated primarily based on the current `RUDDER` value which is refreshed upon each iteration by reading the incoming mail on the MOOS variable `DESIRED_RUDDER`, and the elapsed time since the simulator previously updated the vehicle state, ΔT . The change in heading may also be influenced by the `THRUST` value from the MOOS variable `DESIRED_THRUST`, and may also factor an external rotational speed.

The algorithm for updating the new vehicle heading proceeds as:

1. Calculate $\Delta\theta_{i(\text{RAW})}$, the new raw change in heading influenced only by the current rudder value.
2. Calculate $\Delta\theta_{i(\text{THRUST})}$, an adjusted change in heading, based on the raw change in heading, $\Delta\theta_{i(\text{RAW})}$, and the current `THRUST` value.
3. Calculate $\Delta\theta_{i(\text{EXTERNAL})}$, an adjusted change in heading considering external rotational speed.
4. Calculate θ_i , the final new heading based on the calculated change in heading and the previous heading, and converted to the range of $[0, 359]$.

Step 1: In the first step, the new heading is calculated by the current RUDDER value:

$$\Delta\theta_{i(\text{RAW})} = \text{RUDDER} * \frac{\text{TURN_RATE}}{100} * \Delta T$$

The TURN_RATE is an `uSimMarineV22` configuration parameter with the allowable range of [0, 100]. The default value of this parameter is 70, chosen in part to be consistent with the performance of the simulator prior to this parameter being exposed to configuration. A value of 0 would result in the vehicle never turning, regardless of the rudder value.

Step 2: In the second step the influence of the current vehicle thrust (from the MOOS variable `DESIRED_THRUST`) may be applied to the change in heading. The magnitude of the change of heading is adjusted to be greater when the thrust is greater than 50% and less when the thrust is less than 50%.

$$\Delta\theta_{i(\text{THRUST})} = \theta_{i(\text{RAW})} * \left(1 + \frac{|\text{THRUST}| - 50}{50}\right)$$

The direction in heading change is then potentially altered based on the sign of the THRUST:

$$\Delta\theta_{i(\text{THRUST})} = \begin{cases} -\Delta\theta_{i(\text{THRUST})} & \text{THRUST} < 0, \\ \Delta\theta_{i(\text{THRUST})} & \text{otherwise.} \end{cases}$$

Step 3: In the third step, the change in heading may be further influenced by an external rotational speed. This speed, if present, would be read at the outset of the simulator iteration from either the configuration parameter `rotate_speed`, or dynamically from the MOOS variable `ROTATE_SPEED`. The updated value is calculated as follows:

$$\Delta\theta_{i(\text{EXTERNAL})} = \theta_{i(\text{THRUST})} + (\text{ROTATE_SPEED} * \Delta T)$$

Step 4: In final step, the final new heading is set based on the previous heading and the change in heading calculated in the previous three steps. If needed, the value of the new heading is converted to its equivalent heading in the range [0, 359].

$$\theta_i = \text{heading360}(\theta_{i-1} + \Delta\theta_{i(\text{EXTERNAL})})$$

The simulator then posts this value to the MOOSDB as `USM_HEADING`.

5.3 Propagating the Vehicle Position

The vehicle position is propagated primarily based on the newly calculated vehicle heading and speed, the previous vehicle position, and the elapsed time since updating the previous vehicle position, ΔT .

The algorithm for updating the new vehicle position proceeds as:

1. Calculate the vehicle heading and speed used for updating the new vehicle position, with the heading converted into radians.
2. Calculate the new positions, x_i and y_i , based on the heading, speed and elapsed time.
3. Calculate a possibly revised new position, factoring in any external drift.

Step 1: In the first step, the heading value, $\bar{\theta}$, and speed value, \bar{v} used for calculating the new vehicle position is set averaging the newly calculated values with their prior values:

$$\bar{v} = \frac{(v_i + v_{i-1})}{2} \quad (1)$$

$$\bar{\theta} = \text{atan2}(s, c)$$

where s and c are given by:

$$s = \sin(\theta_{i-1}\pi/180) + \sin(\theta_i\pi/180)$$

$$c = \cos(\theta_{i-1}\pi/180) + \cos(\theta_i\pi/180)$$

The above calculation of the heading average handles the issue of angle wrap, i.e., the average of 359 and 1 is zero, not 180.

Step 2: The vehicle x and y position is updated by the following two equations:

$$x_i = x_{i-1} + \sin(\bar{\theta}) * \bar{v} * \Delta T$$

$$y_i = y_{i-1} + \cos(\bar{\theta}) * \bar{v} * \Delta T$$

The above is calculated keeping in mind the difference in convention used in marine navigation where zero degrees is due North and 90 degrees is due East. That is, the mapping is as follows from marine to traditional trigonometric convention: $0^\circ \rightarrow 90^\circ$, $90^\circ \rightarrow 0^\circ$, $180^\circ \rightarrow 270^\circ$, $270^\circ \rightarrow 180^\circ$.

Step 3: The final step adjusts the x , and y position from above, taking into consideration any external drift that may be present. This drift includes both the drift that may be directed from the incoming MOOS variables as described in Section 7. The drift components below are also a misnomer since they are provided in units of meters per second.

$$x_i = x_i + \text{EXTERNAL_DRIFT_X} * \Delta T \quad (2)$$

$$y_i = y_i + \text{EXTERNAL_DRIFT_Y} * \Delta T \quad (3)$$

5.4 Propagating the Vehicle Depth

Depth change in `uSimMarineV22` is simulated based on a few input parameters. The primary parameter that changes from one iteration to the next is the `ELEVATOR` actuator value, from the MOOS variable `DESIRED_ELEVATOR`. On any given iteration the new vehicle depth, z_i , is determined by:

$$z_i = z_{i-1} + (\dot{z}_i * \Delta t)$$

The new vehicle depth is altered by the *depth change rate*, \dot{z}_i , applied to the elapsed time, Δt , which is roughly equivalent to the `apptick` interval set in the `uSimMarineV22` configuration block. The depth change rate on the current iteration is determined by the vehicle speed and the `ELEVATOR` actuator value, and by the following three vehicle-specific simulator configuration parameters that allow for some variation in simulating the physical properties of the vehicle. The `buoyancy_rate`, for simplicity, is given in meters per second where positive values represent a positively buoyant vehicle. The `max_depth_rate`, and `max_depth_rate_speed` parameters determine the function(s) shown in Figure 2. The vehicle will have a higher depth change rate at higher speeds, up to some maximum speed where the speed no longer affects the depth change rate. The actual depth change rate then depends on the elevator and vehicle speed.

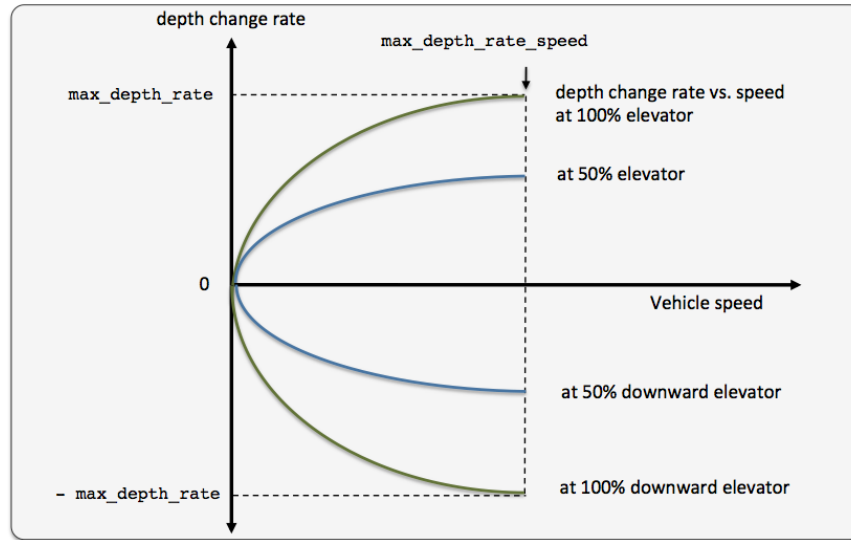


Figure 2: The relationship between the rate of depth change rate, given a current vehicle speed. Different elevator settings determine unique curves as shown.

The value of the depth change rate, \dot{v}_i , is determined as follows:

$$\dot{z}_i = \left(\frac{\bar{v}}{\text{MAX_DEPTH_RATE_SPEED}} \right)^2 * \frac{\text{ELEVATOR}}{100} * \text{MAX_DEPTH_RATE} + \text{BUOYANCY_RATE} \quad (4)$$

Both fraction components in the above equation are clipped to $[-1, 1]$. When the vehicle is in reverse thrust and has a negative speed, this equation still holds. However, a vehicle would likely not have a depth change rate curve symmetric between positive and negative vehicle speeds. By default the value of `buoyancy_rate` is set to 0.025, slightly positively buoyant, `max_depth_rate` is set to 0.5, and `max_depth_rate_speed` is set to 2.0. The prevailing buoyancy rate may be dynamically adjusted by a separate MOOS application publishing to the variable `BUOYANCY_RATE`.

6 Propagating the Vehicle Altitude

The vehicle altitude is base solely on the current vehicle depth and the depth of the water at the current vehicle position. If nothing is known about the water depth, then `USM_ALTITUDE` is not published. The simulator may be configured with a default water depth:

```
default_water_depth = 100
```

This will allow the simulator to produce some altitude information if needed for testing consumers of `USM_ALTITUDE` information. Furthermore, the simulator subscribes for water depth information in the variable `USM_WATER_DEPTH` which could conceivably be produced by another MOOS application with access to bathymetry data and the vehicle's navigation position.

7 Simulation of External Drift

When the simulator updates the vehicle position as in equations provided in Section 5.3, it factors a possible external drift in the x and y directions, in the term `EXTERNAL_DRIFT_X`, and `EXTERNAL_DRIFT_Y` respectively. The external drift may have two distinct components; a drift applied generally, and a drift applied due to a current field configured with an external file correlating drift vectors to local x and y positions. These drifts may be set in one of three ways discussed next.

7.1 External X-Y Drift from Initial Simulator Configuration

An external drift may be configured upon startup by either specifying explicitly the drift in the x and y direction, or by specifying a drift magnitude and direction. Figure 3 shows two external drifts each with the appropriate configuration using either the `drift_x` and `drift_y` parameters or the single `drift_vector` parameter:

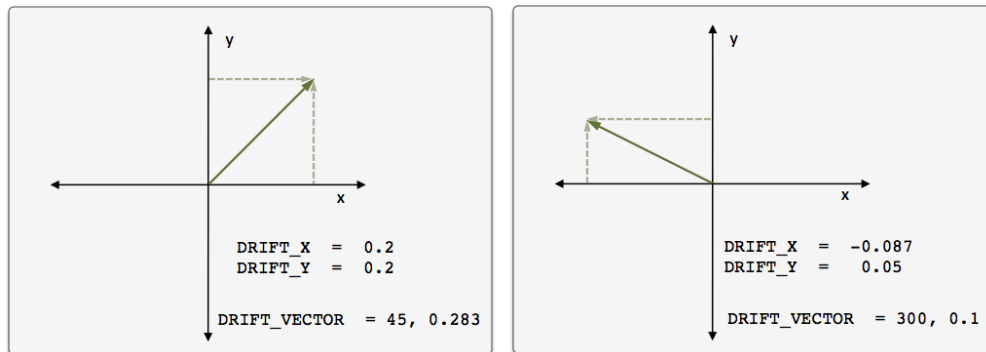


Figure 3: **External Drift Vectors:** Two drift vectors each configured with either the `drift_x` and `drift_y` configuration parameters or their equivalent single `drift_vector` parameter.

If, for some reason, the user mistakenly configures the simulator with both configuration styles, the configuration appearing last in the configuration block will be the prevailing configuration. If `uSimMarineV22` is configured with these parameters, these external drifts will be applied on the very first iteration and all later iterations unless changed dynamically, as discussed next.

7.2 External X-Y Drift Received from Other MOOS Applications

External drifts may be adjusted dynamically by other MOOS applications based on any criteria wished by the user and developer. The `uSimMarineV22` application registers for the following MOOS variables in this regard: `DRIFT_X`, `DRIFT_Y`, `DRIFT_VECTOR`, `DRIFT_VECTOR_ADD`, `DRIFT_VECTOR_MULT`. The first three variables simply override the previously prevailing drift, set by either the initial configuration or the last received mail concerning the drift.

By posting to the `USM_DRIFT_VECTOR_MULT` variable the *magnitude* of the prevailing vector may be modified with a single multiplier such as:

```
DRIFT_VECTOR_MULT = 2
DRIFT_VECTOR_MULT = -1
```

The first MOOS posting above would double the size of the prevailing drift vector, and the second example would reverse the direction of the vector. The `DRIFT_VECTOR_ADD` variable describes a drift vector to be *added* to the prevailing drift vector. For example, consider the prevailing drift vector shown on the left in Figure 3, with the following MOOS mail received by the simulator:

```
DRIFT_VECTOR_ADD = "262.47, 15.796"
```

The resulting drift vector would be the vector shown on the right in Figure 3. This interface opens the door for the scripting changes to the drift vector like the one below, that crudely simulate a gust of wind in a given direction that builds up to a certain magnitude and dies back down to a net zero drift.

```
DRIFT_VECTOR_ADD = 137, 0.25
DRIFT_VECTOR_ADD = 137, 0.25
DRIFT_VECTOR_ADD = 137, 0.25
DRIFT_VECTOR_ADD = 137, 0.25
DRIFT_VECTOR_ADD = 137, 0.25
DRIFT_VECTOR_ADD = 137, -0.25
DRIFT_VECTOR_ADD = 137, -0.25
DRIFT_VECTOR_ADD = 137, -0.25
DRIFT_VECTOR_ADD = 137, -0.25
DRIFT_VECTOR_ADD = 137, -0.25
```

The above style script was described in the documentation for `uTimerScript`, where the `uTimerScript` utility was used to simulate wind gusts in random directions with random magnitude. The `DRIFT_*` interface may also be used by any third party MOOS application simulating things such as ocean or wind currents.

8 The ThrustMap Data Structure

A *thrust map* is a data structure that may be used to simulate a non-linear relationship between thrust and speed. This is configured in the `uSimMarineV22` configuration block with the `thrust_map` parameter containing a comma-separated list of colon-separated pairs. Each element in the comma-separated list is a single mapping component. In each component, the value to the left of the colon is a thrust value, and the other value is a corresponding speed. The following is an example mapping given in string form, and rendered in Figure 4.

```
thrust_map = "-100:-3.5, -75:-3.2, -10:-2, 20:2.4, 50:4.2, 80:4.8, 100:5"
```

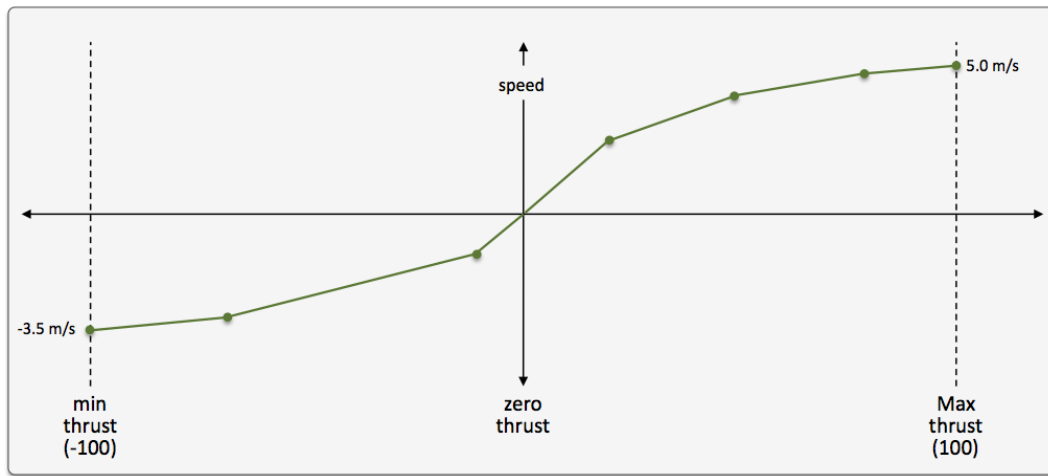


Figure 4: **A Thrust Map:** The example thrust map was defined by seven mapping points in the string `"-100:-3.5, -75:-3.2, -10:-2, 20:2.4, 50:4.2, 80:4.8, 100:5"`.

8.1 Automatic Pruning of Invalid Configuration Pairs

The thrust map has an immutable domain of $[-100, 100]$, indicating 100% forward and reverse thrust. Mapping pairs given outside this domain will simply be ignored. The thrust mapping must also be monotonically increasing. This follows the intuition that more positive thrust will not result in the vehicle going slower, and likewise for negative thrust. Since the map is configured with a sequence of pairs as above, a pair that would result in a non-monotonic map is discarded. All maps are created as if they had the pair `0:0` given explicitly. Any pair provided in configuration with zero as the thrust value will be ignored; zero thrust always means zero speed. Therefore, the following map configurations would all be equivalent to the map configuration above and shown in Figure 4:

```
thrust_map = -120:-5, -100:-3.5, -75:-3.2, -10:-2, 20:2.4, 50:4.2, 80:4.8, 100:5.0, 120:6
thrust_map = -100:-3.5, -75:-3.2, -10:-2, 20:2.4, 50:4.2, 80:4.8, 90:4, 100:5.0
thrust_map = -100:-3.5, -75:-3.2, -10:-2, 0:0, 20:2.4, 50:4.2, 80:4.8, 100:5.0
thrust_map = -100:-3.5, -75:-3.2, -10:-2, 0:1, 20:2.4, 50:4.2, 80:4.8, 100:5.0
```

In the first case, the pairs "-120:-5" and "120:6" would be ignored since they are outside the $[-100, 100]$ domain. In the second case, the pair "90:4" would be ignored since its inclusion would entail a non-monotonic mapping given the previous pair of "80:4.8". In the third case, the pair "0:0" would be effectively ignored since it is implied in all map configurations anyway. In the fourth case, the pair "0:1" would be ignored since a mapping from a non-zero speed to zero thrust is not permitted.

8.2 Automatic Inclusion of Implied Configuration Pairs

Since the domain $[-100, 100]$ is immutable, the thrust map is altered a bit automatically when or if the user provides a configuration without explicit mappings for the thrust values of -100 or 100 . In this case, the missing mapping becomes an implied mapping. The mapping $100:v$ is added where v is the speed value of the closest point. For example, the following two configurations are equivalent:

```
thrust_map = -75:-3.2, -10:-2, 20:2.4, 50:4.2, 80:4.8
thrust_map = -100:-3.2, -75:-3.2, -10:-2, 20:2.4, 50:4.2, 80:4.8, 100:4.8
```

8.3 A Shortcut for Specifying the Negative Thrust Mapping

For convenience, the mapping of positive thrust values to speed values can be used in reverse for negative thrust values. This is done by configuring `uSimMarineV22` with `thrust_reflect=true`, which is false by default. If `thrust_reflect` is false, then a speed of zero is mapped to all negative thrust values. If `thrust_reflect` is true, but the user nevertheless provides a mapping for a negative thrust in a thrust map, then the `thrust_reflect` directive is simply ignored and the thrust map is used instead. For example, the following two configurations are equivalent:

```
thrust_map = -100:-5, -80:-4.8, -50:-4.2, -20:-2.4, 20:2.4, 50:4.2, 80:4.8, 100:5
```

and

```
thrust_map = 20:2.4, 50:4.2, 80:4.8, 100:5
thrust_reflect = true
```

8.4 The Inverse Mapping - From Speed To Thrust

Since a thrust map only permits configurations resulting in a non-monotonic function, the inverse also holds (almost) as a valid mapping from speed to thrust. We say "almost" because there is ambiguity in cases where there is one or more plateau in the thrust map as in:

```
thrust_map = -75:-3.2, -10:-2, 20:2.4, 50:4.2, 80:4.8
```

In this case a speed of 4.8 maps to any thrust in the range $[80, 100]$. To remove such ambiguity, the thrust map, as implemented in a C++ class with methods, returns the lowest magnitude thrust in such cases. A speed of 4.8 (or 5 for that matter), would return a thrust value of 80. A speed of

-3.2 would return a thrust value of -75 . The motivation for this way of disambiguation is that if a thrust value of 80 and 100, both result in the same speed, one would always choose the setting that conserves less energy. Reverse mappings are not used by the `uSimMarineV22` application, but may be of use in applications responsible for posting a desired thrust given a desired speed, as with the `pMarinePID` application.

8.5 Default Behavior of an Empty or Unspecified ThrustMap

If `uSimMarineV22` is configured without an explicit `thrust_map` or `thrust_reflect` configuration, the default behavior is governed as if the following two lines were actually included in the `uSimMarineV22` configuration block:

```
thrust_map      = 100:5
thrust_reflect = false
```

The default thrust map is rendered in Figure 5.

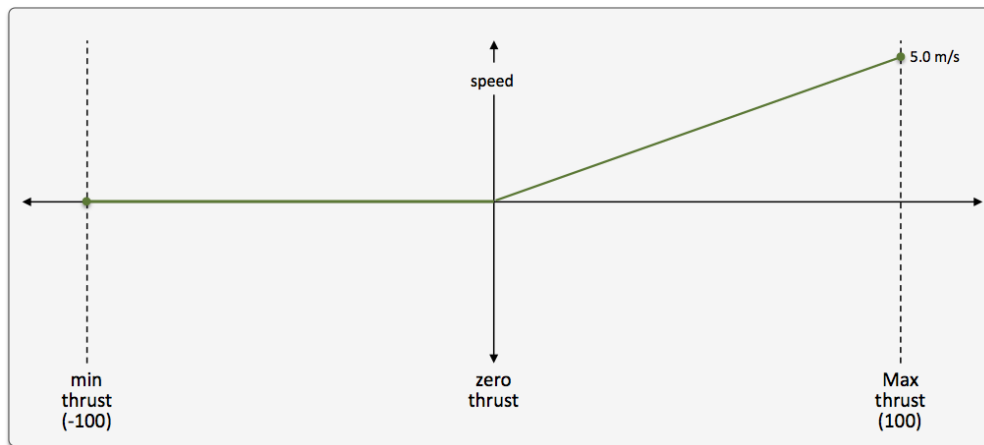


Figure 5: **The Default Thrust Map:** This thrust map is used if no explicit configuration is provided.

This default configuration was chosen for its reasonableness, and to be consistent with the behavior of prior versions of `uSimMarineV22` where the user did not have the ability to configure a thrust map.

9 Wormholes

A *wormhole* connects two points in space whereby a vehicle entering from one direction immediately emerges at the opposite end. While the existence in nature is just a theory, their existence in [uSimMarineV22](#) is a feature now available as of July 2022.

9.1 Wormhole Motivation

A goal of certain simulations is to test vehicle performance, given some initial starting conditions. If the goal is to test performance over say thousands of variations of the mission, the user has roughly two options. (a) Repeatedly launch the mission with the right conditions, shut down the mission, note the results, and repeat. (b) Within a single mission, repeatedly re-create the starting conditions, let the event of interest unfold again, note the results and repeat.

The advantage of (a) is that the mission is short and "clean". There are no phases of the simulation where the vehicles are re-setting or driving back to their starting positions. The drawback comes with the overhead of repeatedly starting, killing, post-processing a simulation for each test of the event of interest. The advantage of (b) is that many events are observed for a single mission start, kill, post-process cycle. The drawbacks of (b) are that, between events, vehicles need to drive to re-set the conditions for the event of interest. Consider the mission in Figure 6 below. A single vehicle traverse a travel lane, where several contacts are crossing the lane. After the initial traversals, each vehicle drives back to re-set the starting conditions.

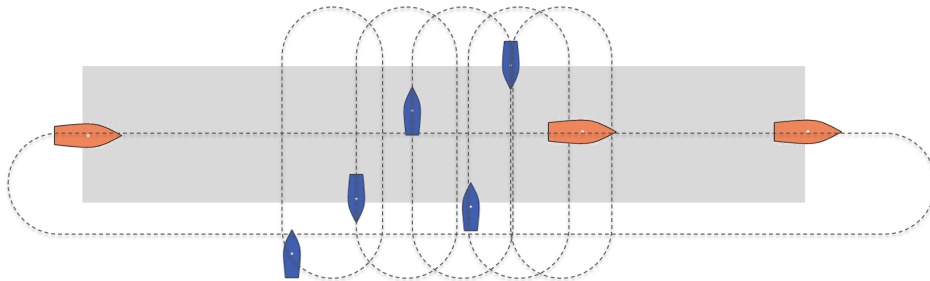


Figure 6: **Simulation with No Wormhole:** A single vehicle, ownship, traverses a travel lane, avoiding collisions with several vehicles which may be crossing the lane. When ownship reaches the end of the lane it traverses back to the beginning of the lane, perhaps encountering contacts outside the intended context for testing. Likewise, the contacts also repeatedly turn around to re-enter the travel lane as foils for testing ownship collision avoidance.

Wormholes can be used in simulations like the one shown above in Figure 6, to create a variation like the one shown in Figure 7. The orange test vehicle, when it reaches the end of the travel lane, will enter the wormhole to instantly re-appear at the same end of the travel lane it came from. The contacts in this example also do not need to turn around (and potentially take evasive action between each other during the turns).

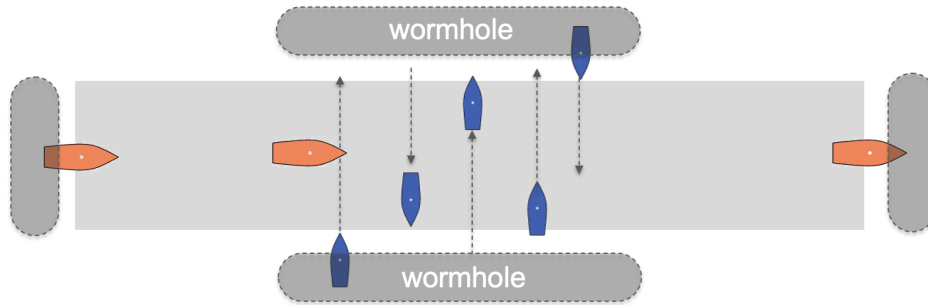


Figure 7: **Simulation with Wormhole:** The single orange vehicle, ownship, traverses a travel lane, entering a wormhole at the end of the lane, and re-emerging at the start of the lane. Contacts crossing the travel lane each enter a wormhole on the destination side, to then immediately re-emerge at the originating side. All vehicles continuously progress in one direction with no need for turning around.

9.2 Wormhole Configuration

A wormhole is configured with a pair of polygons, one polygon is called the `madrid_poly`, and the other is the `weber_poly`. The cities of Madrid (Spain) and Weber (New Zealand), are Antipode cities, lying exactly or nearly exactly at opposite coordinates on the globe.

The below three configuration lines declare the entry and exit polygons and the direction in which the wormhole is configured. The `tag` component allows multiple wormholes to be configured, each with a unique tag.

```
wormhole = tag=one, madrid_poly={format=ellipse,x=80,y=-180,degs=0,major=160,minor=20,pts=20}
wormhole = tag=one, weber_poly={format=ellipse,x=80,y=0,degs=0,major=160,minor=20,pts=20}
wormhole = tag=one, connection=from_madrid
wormhole = tag=one, id_change=true
wormhole = tag=one, delay=0
```

The last two components, `id_change=true` and `delay=3`, are related to features not yet implemented. Three features are yet to be implemented:

- `connection`: Currently the wormhole only works in one declared direction. Bi-directional wormholes will be implemented to support, for example, the bi-directional traffic shown in Figure 7.
- `id_change`: Currently the vehicle name does not change as it passes through the wormhole. At times it may be useful if the name does change, as a manner of testing the operation of the contact manager which needs to handle memory management over many ephemeral contacts over a long mission.
- `delay`: Currently a vehicle entering a wormhole will instantly appear on the other